




Notes d'application

avril 28 2022

Thickness Measurement of Automobile Fuel Tanks

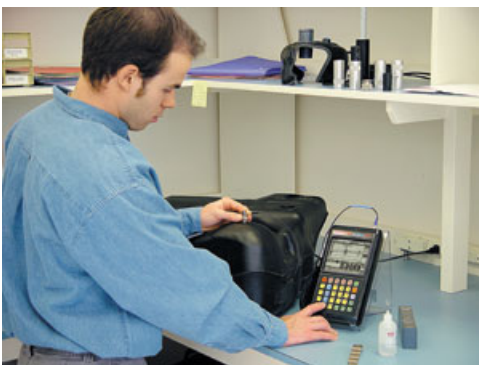


Application: Measurement of individual layers and total thickness in multilayer plastic automobile fuel tanks.

Background: Most contemporary automobile fuel tanks are fabricated with a multilayer plastic construction, typically made of two structural layers of high density polyethylene (HDPE) surrounding a thin gas barrier layer made of ethylene vinyl alcohol (EVOH). The purpose of the barrier layer is to prevent the slow leakage of gasoline vapor through the polyethylene wall. The HDPE structural layers are typically in the thickness range 0.1 in. to 0.2 in. (2.5 to 5 mm), and the EVOH barrier layer is typically 0.004 in. to 0.012 in. (0.1 to 0.3 mm). Tank manufacturers need to measure both the thickness and the depth of the barrier layer.


Equipment: The **Model 38DL PLUS ultrasonic thickness gage** with the Multi-Measurement software option is recommended for simultaneous measurement of individual layers and total tank thickness in this application. With this software, the 38DL PLUS gage is capable of using separately programmed setups (including sound velocity, gain, and blanking settings) for each layer being measured to optimize performance. In this test, the gage is most often used with an M2017-RM (20 MHz) delay line transducer. Contact Olympus for gage setup assistance.

Typical Procedure: The waveforms below show measurements of structural and barrier layers in a typical automobile fuel tank using appropriate setups. The gage's frequency-based barrier measurement mode is used to read the barrier layer whenever its thickness is less than approximately 0.010 in. (0.25 mm). Barrier depth is measured with a conventional Mode 2 setup, and the thickness of the inner polyethylene layer is also measured in Mode 2. Thick barrier layers, greater than approximately 0.010 in. (0.25 mm) may also be measured in Mode 2. Note that because of low pass filtering effects in the outer polyethylene wall, the minimum measurable barrier thickness will usually be approximately 0.004 in. (0.100 mm).


The reflection ratio at the boundary between any two materials is determined by the relative acoustic impedances of those materials. Because virgin and regrind material have essentially identical acoustic impedances, it is not possible to separately measure regrind layers. Also, adhesive layers adjacent to barrier layers are generally too thin and/or too closely impedance matched to measure with ultrasonic techniques and cannot be resolved.

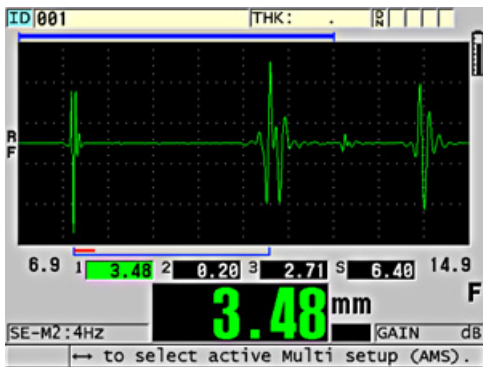

outer polyethylene layer

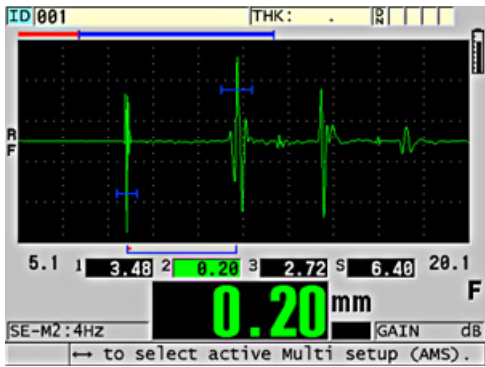

barrier layer (frequency domain measurement)

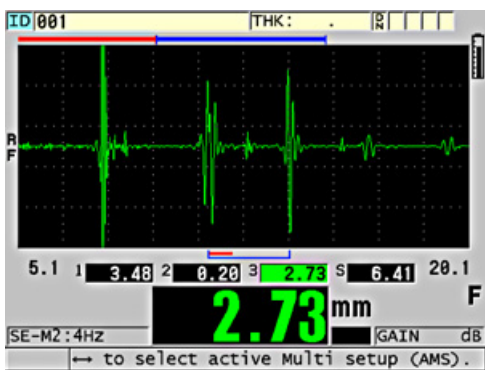

inner polyethylene layer

As with any ultrasonic thickness measurement, accuracy is dependent on proper sound velocity calibration. Velocity calibration must be performed for each material being measured, on samples of known thickness.



38DL PLUS

Polyvalent, le mesureur d'épaisseur 38DL PLUS peut être combiné à des sondes à émission-réception séparées pour la mesure de l'épaisseur de tuyaux corrodés, ou à une sonde monoélément pour la mesure très précise de l'épaisseur de matériaux minces ou multicouches.

En savoir plus ► [https://www.olympus-ims.com/\\$lang/38dl-plus/](https://www.olympus-ims.com/$lang/38dl-plus/)



45MG

Le 45MG est un mesureur d'épaisseur à ultrasons de pointe équipé de série de multiples fonctions de mesure et d'options logicielles. Cet outil de mesure d'épaisseur unique est compatible avec notre gamme complète de sondes de mesure d'épaisseur monoéléments et à émission-réception séparées.

En savoir plus ► <https://www.olympus-ims.com/fr/45mg/>



Magna-Mike 8600

Le Magna-Mike™ 8600 est un mesureur d'épaisseur à effet Hall qui utilise une sonde magnétique pour mesurer avec précision l'épaisseur des objets faits de matériaux non ferreux et minces, comme les bouteilles en plastique.

En savoir plus ► <https://www.olympus-ims.com/magna-mike8600/>



72DL PLUS

Portable et facile à utiliser, le mesureur d'épaisseur à ultrasons 72DL PLUS™ peut fournir très rapidement des mesures d'épaisseur précises. Compatible avec les sondes monoéléments d'une fréquence allant jusqu'à 125 MHz, cet appareil novateur est parfaitement adapté à la mesure de l'épaisseur des matériaux ultrafins, notamment les peintures multicouches, les revêtements et le plastique. Le logiciel de mesure multicouche peut afficher simultanément l'épaisseur de six couches distinctes.

En savoir plus ► <https://www.olympus-ims.com/72dl-plus/>